


Congratulations on the purchase of your DRK LIGHT XL – 35W Portable Shortwave Lamp!

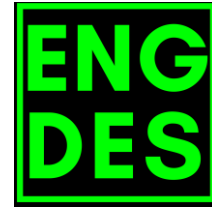

What's Included:

- DRK LIGHT XL Lamp
- 5200mAh Rechargeable Lithium Ion Battery Pack
 - o *7800mAh Optional*
- Lithium Ion Battery Charger

Getting Started With Your New DRK LIGHT XL Lamp:

- Please carefully unpack the lamp and ensure that everything listed above has been included.
- Before using the lamp, the included battery pack will need to be charged. Please follow the instruction packaged with the battery charger to fully charge the battery pack.
- Attach the battery pack to the rear of the lamp using the preinstalled Velcro patch.
- *Note on Optional Wall Power Supply Operation:* When using the wall power supply with your DRK LIGHT XL, several toggles of the ON/OFF button may be required to ignite your lamp's bulb.

Warnings and Safety Precautions:

- **This lamp emits potentially hazardous amounts of UVC radiation!**
- **ALWAYS** wear proper UV safety equipment when operating this lamp.
- **NEVER** expose bare skin to the emitted UV light when operating this lamp.
- Do not point the lamp at anything/anyone that could potentially be damaged by UV radiation.
- Do not use battery packs that have not been approved for use with this lamp. Doing so may result in damage to the device and potential injury.
- Do not attempt to recharge batteries with this lamp's battery charger that have not been approved for use with the DRK LIGHT XL.
- Do not attempt to use this lamp's battery with any lamp other than the DRK LIGHT XL.
- Do not strike or burn the included lithium ion battery. Doing so may result in serious injury.
- This lamp contains a glass bulb and a glass filter. Please handle and transport with care.
- Do not use this fluorescent mineral lamp for anything other than its intended use.

Replacing Your Bulb:

The DRK LIGHT XL uses a **Philips TUV PL-L 35W/4P HO** bulb. Should the lamp require a new bulb, a replacement can be purchased through many online retailers or via our website.

- Remove the battery pack the DRK LIGHT XL lamp.
- Unscrew the four plastic thumbscrews located at the four corners of the lamp until they are free.
- Gently lift the lid of the lamp off and set it to the side of the lamp base.
- Gently pull the old bulb away from the bulb socket and carefully remove it from the lamp base.
- Install the new bulb and perform the above steps in reverse.

Accessories: Addition battery packs, A/C power supplies, and cases are available via our website at www.engenioussdesigns.com

Contact Information:

Please contact us via our webpage at <https://www.engenioussdesigns.com/contact> if you have any comments, questions, or concerns.